


Description	RTDTemp2000
Temperature Sensor	100Ω Platinum RTD
Temperature Range	-200 °C to +850 °C
Temperature Resolution	0.01 °C
Calibrated Accuracy	±0.05 °C (-200 °C to +260 °C) ±0.3 °C (+260 °C to +850 °C)
Memory	174,762
Sample Rate	2 seconds up to 24 hours
Required Interface Package	IFC200
Typical Battery Life	1 year at 1 minute reading rate with display off, 30 days typical with continuous LCD display use
Baud Rate	115,200
Operating Environment	-20 °C to +60 °C 0 to 95%RH (non-condensing)
Materials	Black anodized aluminum
Dimensions	4.8" x 3.3" x 1.25" (122 mm x 84 mm x 32 mm)
Weight	16 oz (440 g)
Approvals	CE

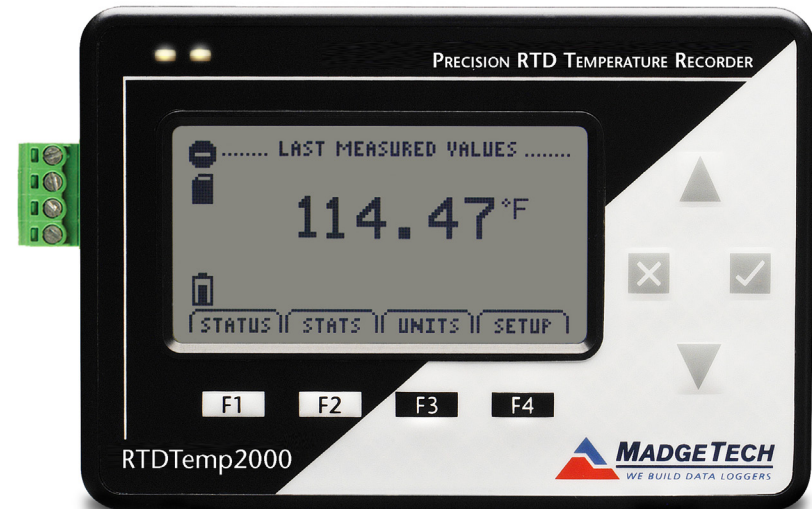

### Battery Warning

**WARNING: FIRE, EXPLOSION, AND SEVERE BURN HAZARD. DO NOT SHORT CIRCUIT, CHARGE, FORCE OVER DISCHARGE, DISASSEMBLE, CRUSH, PENETRATE OR INCINERATE. BATTERY MAY LEAK OR EXPLODE IF HEATED ABOVE 60 °C (140 °F).**

*Specifications subject to change.*

See MadgeTech's terms and conditions at [www.madgetech.com](http://www.madgetech.com)

### RTDTemp2000

Precision RTD Based Temperature Data Logger  
with LCD Display

**MadgeTech, Inc.**  
6 Warner Road • Warner, NH 03278  
Phone 603.456.2011 • Fax 603.456.2012  
[www.madgetech.com](http://www.madgetech.com) • [info@madgetech.com](mailto:info@madgetech.com)

DOC-1150035-00 REV 12 2014.04.10

## Product Notes

The RTDTemp2000 is precision RTD-based temperature data logger with LCD display. The convenient LCD provides access to the current temperature reading, as well as minimum, maximum and average statistics.

### Backlight

The backlight uses a significant amount of battery life. Refer to the manual to configure the auto shut-off when not in use.

### Set Password


To password protect the device so that others cannot start, stop or reset the device;

- In the Connected Devices panel, click the device desired.
- On the Device Tab, in the Information Group, click Properties. Or, right-click the device and select Properties in the context menu.
- On the General Tab, click Set Password.
- Enter and confirm the password in the box that appears, then select OK

## Wiring the Data Logger

### Wiring Options

For 4-wire RTD probes, connect the four lead wires to your RTD logger as shown in the figures below.

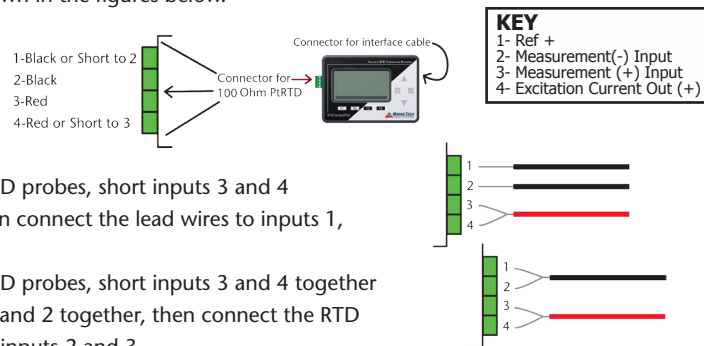

For 3-wire RTD probes, short inputs 3 and 4 together, then connect the lead wires to inputs 1, 2 and 3.

For 2-wire RTD probes, short inputs 3 and 4 together and inputs 1 and 2 together, then connect the RTD lead wires to inputs 2 and 3.

*Warning: Note the polarity instructions. Do not attach wires to the wrong terminals.*

100 Ohm, 2 or 4 wire RTD probes are recommended for the most accurate performance. Most 100 Ohm, 3 wire RTD probes will work, but MadgeTech cannot guarantee the accuracy. To determine whether or not the 3-wire RTD probe will work, the resistance between the two same colored wires should be less than 1 Ohm. Note: Please contact the manufacturer of the RTD probe for questions on the resistance

## Installation Guide

### Installing the Interface cable

- IFC200

Insert the device into a USB port. The drivers will install automatically.

### Installing the software

Insert the Software USB Stick in an open USB port. If the autorun does not appear, locate

the drive on the computer and double click on **Autorun.exe**. Follow the instructions provided in the Wizard.

## Device Operation

### Connecting and Starting the data logger

- Once the software is installed and running, plug the interface cable into the data logger.
- Connect the USB end of the interface cable into an open USB port on the computer.
- The device will appear in the Connected Devices list, highlight the desired data logger.
- For most applications, select **"Custom Start"** from the menu bar and choose the desired start method, reading rate and other parameters appropriate for the data logging application and click **"Start"**. (**"Quick Start"** applies the most recent custom start options, **"Batch Start"** is used for managing multiple loggers at once, **"Real Time Start"** stores the dataset as it records while connected to the logger.)
- The status of the device will change to **"Running"**, **"Waiting to Start"** or **"Waiting to Manual Start"**, depending upon your start method.
- Disconnect the data logger from the interface cable and place it in the environment to measure.

*Note: The device will stop recording data when the end of memory is reached or the device is stopped. At this point the device cannot be restarted until it has been re-armed by the computer.*

### Downloading data from a data logger

- Highlight the data logger in the Connected Devices list. Click **"Stop"** on the menu bar.
- Once the data logger is stopped, with the logger highlighted, click **"Download"**. You will be prompted to name your report.
- Downloading will offload and save all the recorded data to the PC.

## Device Maintenance

### Battery Replacement

Materials: 3/32" HEX Driver (Allen Key) and a Replacement Battery (U9VL-I)

- Remove the back cover from the device by unscrewing the four screws.
- Remove the battery from its compartment and unsnap it from the connector.
- Snap the new battery into the terminals and verify it is secure.
- Replace the cover taking care not to pinch the wires. Screw the enclosure back together securely. *Note: Be sure not to over tighten the screws or strip the threads.*

### Recalibration

The RTDTemp2000 standard calibration is at two points, 50  $\Omega$  and 150  $\Omega$ .

### Pricing:

Recalibration traceable to NIST	\$70.00
Recalibration	\$40.00

### Additional Services:

Verification Point	\$15.00 per point
--------------------	-------------------

*Prices and specifications subject to change. See MadgeTech's terms and conditions at [www.madgetech.com](http://www.madgetech.com). To send the devices back, visit [www.madgetech.com](http://www.madgetech.com), select Services then RMA Process.*