


# Product User Guide

## PRHTemp2000

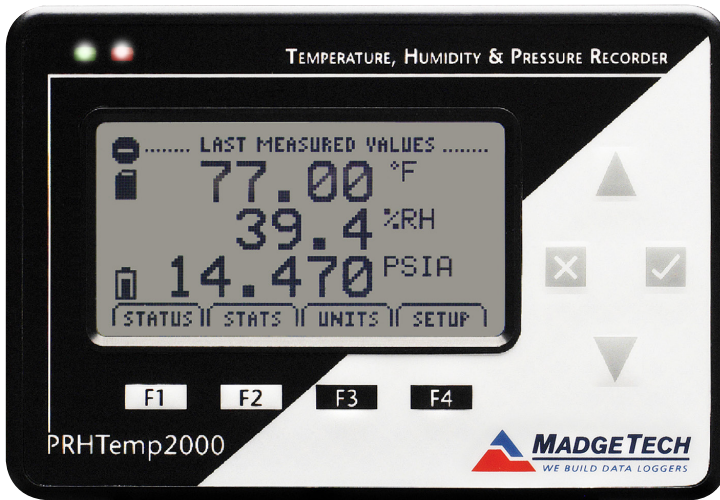

### PRHTemp2000

Pressure, Humidity and Temperature Data Logger with LCD

## **Table of Contents**

|                             |     |
|-----------------------------|-----|
| Quick Start Steps .....     | 3   |
| Product Overview .....      | 4   |
| Display Overview.....       | 4   |
| Software Installation ..... | 5   |
| Device Operation.....       | 5   |
| Computer Interface .....    | 6   |
| Wall Mounting.....          | 6   |
| Front Panel Overview.....   | 7   |
| Screen Descriptions .....   | 8-9 |
| Maintenance .....           | 10  |
| General Specifications..... | 11  |

### Quick Start Steps

1. Install the MadgeTech 4 Software and USB Drivers onto a Windows PC.
2. Wire the data logger with the desired probes.
3. Connect the data logger to the Windows PC with the IFC200 (sold separately).
4. Launch the MadgeTech 4 Software. The pHTemp2000 will appear in the Connected Devices window indicating the device has been recognized.
5. Select the start method, reading rate and any other parameters appropriate for the desired data logging application. Once configured, click the **Start** icon and deploy the data logger
6. To download data, connect the data logger to the windows PC with the IFC200, select the device in the list, click the **Stop** icon, and then click the **Download** icon. A graph will automatically display the data.


Please refer to the PRHTemp2000 Product Manual for full product details by going to [www.madgetech.com/product-documentation](http://www.madgetech.com/product-documentation).

## Product Overview

The PRHTemp2000 is a pressure, temperature and humidity data logger with LCD display. The convenient LCD provides access to the current pressure, temperature and humidity readings, as well as minimum, maximum and average statistics.

Please refer to the PRHTemp2000 Product Manual for full product details by going to [www.madgetech.com/product-documentation](http://www.madgetech.com/product-documentation).

## Display Overview

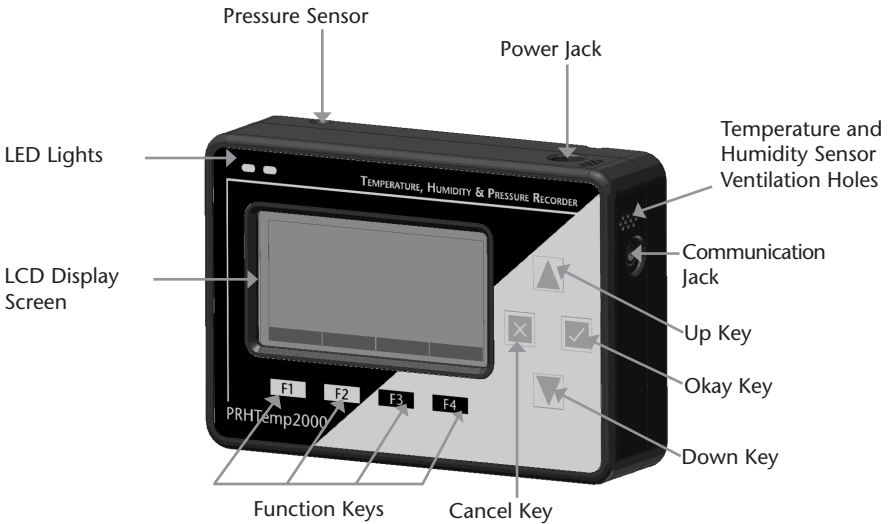

## Status Indicators



Battery Power (Full, Half-full, Empty)



Memory Remaining (Empty, Half-full, Full)



Device is running



Device is stopped



Delay start



Wait Icon (device is busy)



Device reset has occurred



External power present

## Software Installation

### Installing the MadgeTech 4 Software

The MadgeTech 4 Software makes the process of downloading and reviewing data quick and easy, and is free to download from the MadgeTech website.

1. Download the MadgeTech 4 Software on a Windows PC by going to:  
[www.madgetech.com/software-download](http://www.madgetech.com/software-download).
2. Locate and unzip the downloaded file (typically you can do this by right clicking on the file and selecting Extract).
3. Open the MTInstaller.exe file.
4. You will be prompted to select a language, then follow the instructions provided in the MadgeTech 4 Setup Wizard to finish the MadgeTech 4 Software installation.

## Device Operation

### Connecting and Starting the data logger


- Once the software is installed and running, plug the interface cable into the data logger.
- Connect the USB end of the interface cable into an open USB port on the computer.
- The device will appear in the Connected Devices list, highlight the desired data logger.
- For most applications, select **“Custom Start”** from the menu bar and choose the desired start method, reading rate and other parameters appropriate for the data logging application and click **“Start”**. (*“Quick Start” applies the most recent custom start options, “Batch Start” is used for managing multiple loggers at once, “Real Time Start” stores the dataset as it records while connected to the logger.*)
- The status of the device will change to **“Running”**, **“Waiting to Start”** or **“Waiting to Manual Start”**, depending upon your start method.
- Disconnect the data logger from the interface cable and place it in the environment to measure.

*Note: The device will stop recording data when the end of memory is reached or the device is stopped. At this point the device cannot be restarted until it has been re-armed by the computer.*

### Downloading data from a data logger

- Connect the logger to the interface cable.
- Highlight the data logger in the Connected Devices list. Click **“Stop”** on the menu bar.
- Once the data logger is stopped, with the logger highlighted, click **“Download”**. You will be prompted to name your report.
- Downloading will offload and save all the recorded data to the PC


## Computer Interface

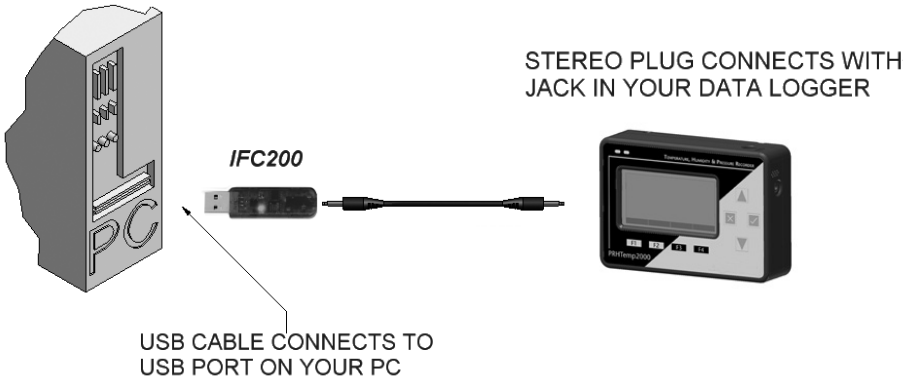

Fully insert the male connector of the IFC200 interface cable into the female receptacle of the data logger. Fully insert the female USB connector into the USB. (Please see the *Data Logger Software manual* for further information.)

**\*WARNING:** Install driver before connecting a device using a USB for the first time. See the *Software manual* for further information.

## Wall Mounting

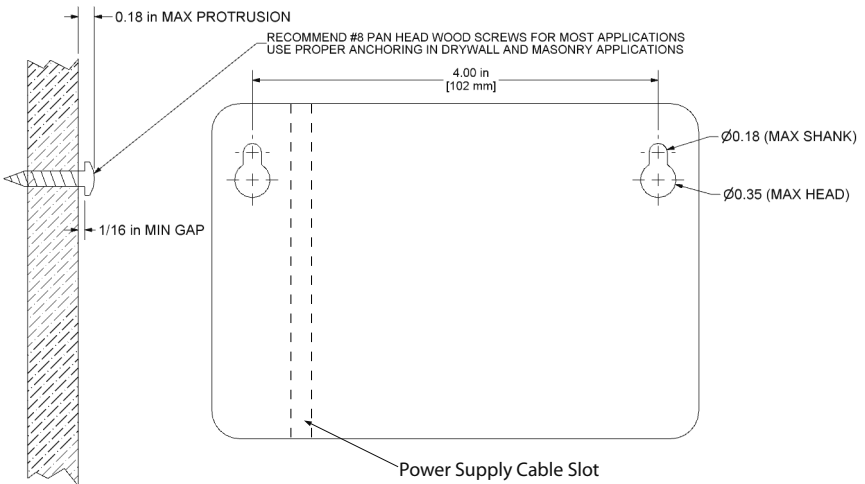

## Front Panel Overview

### Changing the display units

The PRHTemp2000 comes with factory default display units of °C for temperature, %RH for humidity, and PSIA for pressure. These units can be easily changed by pressing the F3 button in the main screen and then selecting either F1 for temperature, F2 for humidity or F3 for pressure. After selecting a channel, the available units can be scrolled through by either pressing the channel's function key repeatedly or using the UP and DOWN keys.

**Button pressing chain:** Main Screen -> F3 -> F1(temp), F2(humidity) or F3(pressure) -> function key repeatedly or UP and DOWN

### Checking the memory status

A status icon appears on all screens representing memory, but further information including percent memory left and number of readings taken can also be viewed. From the Main Screen press the F1 key to enter the Status screens then press F2 to view memory status information.

**Button pressing chain:** Main Screen -> F1 -> F2

### Checking power status

A battery status and external power status (if available) icon appear on all screens, but percent battery power remaining and external power presence as well as battery type, current battery voltage, and current external voltage can also be viewed. From the Main Screen press F4 to view the Device Configuration Menu, F2 to access the power options, then F4 twice to view the Power Status screen, including battery power percent remaining and the presence of external power. Battery type and battery voltage are also displayed, as well as external power voltage (if connected).

**Button pressing chain:** Main Screen -> F4 -> F2 -> F4 -> F4

### Changing the Contrast

The PRHTemp2000's LCD screen contrast values can be changed in two ways. One method is outlined in the Function Reference Guide. A faster, simpler way involves simultaneously pressing the CANCEL and UP or DOWN button in any screen.


**Button pressing chain:** CANCEL + UP (to increase) or DOWN (to decrease)

## Screen Descriptions

### Main Screen:

*Displays last measured values.*

- F1 = STATUS: goes to status screens
- F2 = STATS: shows statistics menu
- F3 = UNITS: goes to unit selection screen
- F4 = SETUP: shows device configuration menu
- CANCEL = no function
- OK = no function
- UP = scrolls channel readings (only available while using large text)
- DOWN = scrolls channel readings (only available while using large text)

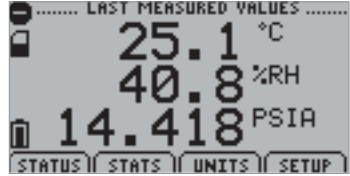

### Status Screens (Run Parameters):

*Displays information about run parameters including date of recording start (start date), time of recording start (start time), stop date, stop time, recording rate, and current status.*

**For all status screens:**


- F1 = RUN: displays run parameters screen
- F2 = MEM: displays memory status screen
- F3 = TIME: displays time information screen
- F4 = MORE: displays the second status screen
- CANCEL = returns to main screen
- OK = returns to main screen
- UP = no function
- DOWN = no function



### Statistics Menu Screen:

*Displays options available within the statistics menu.*

- F1 = CHAN: goes to screen that sorts statistics by channel
- F2 = TYPE: goes to screen that sorts statistics by type
- F3 = INFO: goes to Statistics Information Screen
- F4 = EXIT: returns to main screen
- CANCEL = returns to main screen
- OK = returns to main screen
- UP = no function
- DOWN = no function

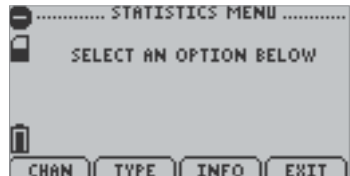



## Unit Selection Menu:

*Displays units currently being used for each channel*

**F1 = TEMP:** selects temperature channel for unit change

**F2 = HUMID:** selects humidity channel for unit change


**F3 = PRESS:** selects pressure channel for unit change

**F4 = OK:** returns to Main Screen

*Note: unit selection can be changed by pressing the corresponding function key repeatedly or using the UP and DOWN arrows to select appropriate units.*

**CANCEL** = returns to main menu without accepting changes

**OK** = accepts changes and returns to main menu

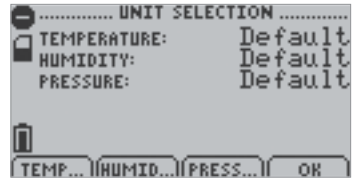

## Device Configuration Menu:

*Displays options available within the device configuration menu.*

**F1 = DISPLAY:** enters Adjust Visibility screen

**F2 = POWER:** enters Power Modes screen

**F3 = INFO:** goes to Device Information screens


**F4 = EXIT:** returns to main screen

**CANCEL** = returns to main screen

**OK** = returns to main screen

**UP** = no function

**DOWN** = no function

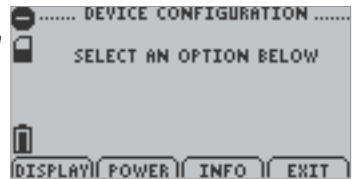

## Device Maintenance

### Battery Information



#### BATTERY WARNING

This data logger contains a lithium battery. Do not cut the battery open, incinerate, or recharge. Do not heat lithium batteries above the specified operating temperature.\* Dispose of the battery in accordance with local regulations.

\*See the individual specification sheets at [www.madgetech.com](http://www.madgetech.com).

### Battery Replacement

This product does not have any user-serviceable parts except the battery which should be replaced periodically. The battery life is affected by battery type, ambient temperature, sample rate, sensor selection, off-loads and LCD usage. The device has a battery status indicator on the LCD. If the battery indication is low, or if the device seems to be inoperable, it is recommended that the battery be replaced.

#### Materials: 3/32" HEX Driver (Allen Key) and a Replacement Battery (U9VL-J)

- Remove the back cover from the device by unscrewing the four screws.
- Remove the battery from its compartment and unsnap it from the connector.
- Snap the new battery into the terminals and verify it is secure.
- Replace the cover taking care not to pinch the wires. Screw the enclosure back together.

*Note: Be sure not to over tighten the screws or strip the threads.*

For any other maintenance or calibration issues, we recommend the unit be returned to the factory for service. Before returning the device, you must obtain an RMA from the factory.

### Recalibration

The PRHTemp2000 standard calibration is one point at 25 °C, two points at 25 %RH and 75 %RH and two points at 14.7 PSI and 30 PSI.

#### Additional Services:

Custom calibration and verification point options available, please call for pricing.

*Call for custom calibration options to accommodate specific application needs.*

*Prices and specifications subject to change. See MadgeTech's terms and conditions at [www.madgetech.com](http://www.madgetech.com)*

*To send devices to MadgeTech for calibration, service or repair, please use the MadgeTech RMA Process by visiting [www.madgetech.com](http://www.madgetech.com), then under the services tab, select RMA Process.*

## General Specifications

| Description                | PRHTemp2000  |
|----------------------------|--|
| Temperature Sensor         | Semiconductor  |
| Temperature Range          | -20 °C to +60 °C (-4 °F to +140 °F)                                    |
| Temperature Resolution     | 0.1 °C (0.18 °F)   |
| Calibrated Accuracy        | +0.5 °C/+0.9 °F (0 °C to 50 °C/32 °F to 122 °F)                        |
| Pressure Sensor            | Semiconductor (Strain Gauge)   |
| Pressure Range             | 0 to 30 PSIA   |
| Pressure Resolution        | 0.002PSIA  |
| Calibrated Accuracy        | +1.0%FSR; 0.25% at 25 °C   |
| Humidity Sensor            | Internal Semiconductor   |
| Humidity Range             | 0%RH to 95%RH  |
| Humidity Resolution        | 0.1%RH   |
| Calibrated Accuracy        | +3%RH (2%RH @ 25 °C Typical)   |
| Memory                     | 87,381/channel   |
| Reading Rate               | 1 reading every 2 seconds up to 1 reading every 24 hours               |
| Required Interface Package | IFC200   |
| Baud Rate                  | 115,200  |
| Typical Battery Life       | 1 year with display off, 30 days with continuous LCD and no backlight  |
| Operating Environment      | -20 °C to +60 °C (-4 °F to +140 °F),<br>0%RH to 95%RH (non-condensing) |
| Material                   | Black anodized aluminum  |
| Dimensions                 | 4.8 in x 3.3 in x 1.25 in (122 mm x 84 mm x 32 mm)                     |
| Weight                     | 16 oz (440 g)  |
| Approvals                  | CE   |

**MadgeTech, Inc.**

6 Warner Road • Warner, NH 03278

Phone 603.456.2011 • Fax 603.456.2012

[www.madgetech.com](http://www.madgetech.com) • [info@madgetech.com](mailto:info@madgetech.com)