

Device Maintenance

Battery Replacement

Materials:  
Small Phillips Head Screwdriver  
Replacement Battery (LTC-7PN)

- Puncture the center of the back label with the screw driver and unscrew the enclosure.
- Remove the battery by pulling it perpendicular to the circuit board.
- Insert the new battery into the terminals and verify it is secure.
- Screw the enclosure back together securely.

**Note:** Be sure not to over tighten the screws or strip the threads.

Battery Warning

**WARNING: FIRE, EXPLOSION, AND SEVERE BURN HAZARD. DO NOT SHORT CIRCUIT, CHARGE, FORCE OVER DISCHARGE, DISASSEMBLE, CRUSH, PENETRATE OR INCINERATE. BATTERY MAY LEAK OR EXPLODE IF HEATED ABOVE 80°C (176°F).**

Recalibration

The Volt101 or Volt110 standard calibration depends on the range.

Voltage	100mV	2.5V	15V	30V
Range	0V and 90-100mV	0V and 2.25-2.5V	0V and 13.5-15V	0V and 27-30V

Pricing:

Recalibration traceable to NIST \$60.00  
Recalibration \$40.00

Additional:

As Found Data \$15.00  
Additional Points \$15.00 per point

To send the devices back, visit [www.madgetech.com](http://www.madgetech.com), select Services then RMA Process.

Part Number	Volt 101	Volt110
Range	*See Table for Details	
Resolution	*See Table for Details	
Accuracy	*See Table for Details	
Memory	32,767	
Sample Rate	1 second up to 12 hours	
LED Indicator	Red	
Channels	1	
Required Interface Package	IFC110 or IFC200	
Baud Rate	2,400	57,600
Typical Battery Life	1 year	10 years
Operating Environment	-40 to +80°C, 0 to 95%RH (non-condensing)	
Material	ABS plastic	
Dimensions	1.4" x 2.5" x 0.6" (36mm x 64mm x 16mm)	1.7" x 2.7" x 0.8" (44mm x 69mm x 21mm)
Approvals	CE	

\*Volt101 % Volt110 Range, Resolution and Calibrated Accuracy

Nominal Range	±100mV	0 to 2.5V	0 to 15V	0 to 30V
Measurement Range (VDC)	±150mV	-0.25 to 2.75	-1 to 16	-2 to 32
Accuracy	±0.01%FSR	±0.01%FSR	±0.10%FSR	±0.10%FSR
Resolution (mV)	5µV	0.1	0.5	1.0
Common Mode Input Range	0 to 2.5V	0 to 2.5V	0 to 2.5V	0 to 2.5V

Specifications subject to change.

See MadgeTech's terms and conditions at [www.madgetech.com](http://www.madgetech.com)

MadgeTech, Inc.  
PO Box 50 • Warner, NH 03278  
Phone 603.456.2011 • Fax 603.456.2012  
[www.madgetech.com](http://www.madgetech.com) • [info@madgetech.com](mailto:info@madgetech.com)

Volt101 and Volt110




**Volt101-100mV**  
±100mV Voltage Recorder  
**Volt101-2.5V**  
2.5V Voltage Recorder  
**Volt101-15V**  
15V Voltage Recorder  
**Volt101-30V**  
30V Voltage Recorder

**Volt110-100mV**  
±100mV Voltage Recorder with  
10 Year Battery Life  
**Volt110-2.5V**  
2.5V Voltage Recorder with  
10 Year Battery Life  
**Volt110-15V**  
15V Voltage Recorder with  
10 Year Battery Life  
**Volt110-30V**  
30V Voltage Recorder with  
10 Year Battery Life

### Wiring the Data Logger


#### Volt101 & Volt110 Single Ended Wiring

Two-position removable screw terminal connections; accepts 2-wire configurations.

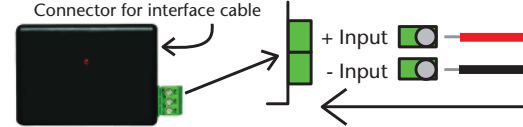

#### Volt101 & Volt110 Differential Wiring

Two position removable screw terminal connections, accepts 3 wire configurations.

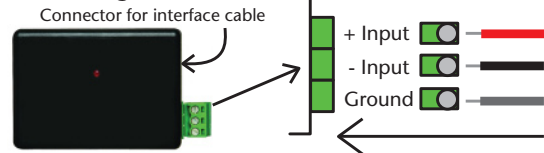

**Warning:** Note the polarity instructions. Do not attach wires to the wrong terminals.

### Product Notes

#### LEDs

Once started, the LED will flash at the selected reading rate to indicate that the device is running.

#### Engineering Units

**Engineering units** are used to convert one measurement reading to another. The MadgeTech software allows for software level Engineering Units (conversion applied to data after download). Certain devices have device level Engineering Units, which upon download automatically appear in the chosen unit of measure.

Please refer to the app note "Engineering Units", found on the MadgeTech website, for information on how to manage Engineering Units.

### Installation Guide

#### Installing the Interface cable

- IFC200, IFC202 or IFC300  
Refer to the "Quick Start Guide" included in the package.

- IFC110, IFC102 or IFC103  
Plug the serial cable into the port and verify it is secure.

- USB-1 or USB-101  
Install the USB drivers from the CD provided in the kit, then plug the USB cable into the computer and the serial cable into the serial port.

#### Installing the software

Insert the Software CD in the CD-ROM Drive. If the autorun does not appear, locate the drive on the computer and double click on **Autorun.exe**. Follow the instructions provided in the Wizard.

#### Connecting the data logger

- Once the software is installed and running, plug the interface cable into the data logger.
- Click the **Communication Menu**, then **Auto Configure Port**.
- After a moment, a box similar to the following will appear;



- Click **OK**. The **Device Status** box will appear. Click **OK**.
- At this point, communications have been configured for your logger. These settings can be found under the **Communication Menu**.

**Note:** For additional installation instructions refer to your "Data Logger & Software Operating Manual".

### Device Operation

#### Starting the data logger

- Click **Device Menu** then **Start Device**.
- Choose the desired start method.
- Choose the start parameters by selecting a **Reading Rate** suitable for your application.
- Enter in any other desired parameters and click **Start**.
- A box will appear stating the data logger has been started. Click **OK**.



- Disconnect the data logger from the interface cable and place it in the environment to measure.

**Note:** The device will stop recording data when the end of memory is reached or the device is stopped. At this point the device cannot be restarted until it has been re-armed by the computer.

#### Downloading data from a data logger

- Connect the data logger to the interface cable.
- Click the **Device Menu** then **Read Device Data**. This will offload all recorded data onto the PC.

### Technical Support

Visit [www.madgetech.com](http://www.madgetech.com), or call (603) 456-2011. Technical support is also available by e-mailing [support@madgetech.com](mailto:support@madgetech.com)

Additional product information is available by e-mailing [info@madgetech.com](mailto:info@madgetech.com).